





 


 




 



 

 
 







 








 

Original	Sustituto
 Standby	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Guide
 Add / Clear	 Exit
 <<<	 <<<
 >>>	 >>>
 Pause	 Pause

Original	Sustituto
 Play	 Play
 Stop	 Stop
 I<<<	 I<<<
 >>>I	 >>>I
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 Navigat	 Smart
 Title	 List
 Menu	 Menu
 Subtitle	 Subt
 Angle	 Format
 Source	 AV
 Rec	 Rec





Original	Sustituto	
TIMER	Timer	 +  Shift + AV
EDIT	Edit	 Media
USB	USB	 Red
DVD	DVD	 Green
HDD	HDD	 Yellow
DISC OPER	Disc Oper	 D. Menu
SLOW	Slow	 +  Shift + Pause
RETURN	Return	 Back
REPEAT	Repeat	 Text
ZOOM	Zoom	 +  Shift + Eject
CH+	CH+	 Ch +
CH-	CH-	 Ch -
P/N	P/N	 TV/R
AUDIO	Audio	 Dual
VOL+	Vol+	 Vol +
L/P	L/P	 Info
MUTE	Mute	 Mute

Original	Sustituto		
	Vol-		Vol -

