



 


 

 







 



 



 


 






 







 



 



 



 

 












Original		Sustituto		Original		Sustituto	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





Original	Sustituto	Original	Sustituto
 REVEAL	Reveal	 APP MEDIA	Media
 HOLD	Hold	 SOUND DUAL	Dual
 MIX	Mix	 SHIFT + APP MEDIA	Shift + Media
 RED	Red	 A	Red
 GREEN	Green	 B	Green
 YELLOW	Yellow	 C	Yellow
 CYAN	Cyan	 D	Blue
 NICAM	Nicam	 HOME SMART	Smart
 P.MODE	P.Mode	 SHIFT + PICTURE FORMAT	Shift + Format
 S.MODE	S.Mode	 SHIFT + SOUND DUAL	Shift + Dual
 OK	OK	 OK	Ok
 Up	Up	 Up	Up
 Down	Down	 Down	Down
 Right	Right	 Right	Right
 Left	Left	 Left	Left

