









 
 
 
 

 


 
 
 
 
 
 
 






 



 



 




 


 


 


 

 


 


 




 
 
 




















Original		Sustituto		Original		Sustituto	
	Power		Power		>>I Skip		>>I
	Open / Close		Eject		Stop		Stop
	DVD		Smart		<< Backward		<<
	VCR		Media		Play		Play
	Display		Info		>> Forward		>>
	Disc Menu		D. Menu		Program		Sleep
	Up / PR/TRK+		Up		Clear		Exit
	Up / PR/TRK+		Ch +		1		1
	Left		Left		2		2
	OK / Enter		Ok		3		3
	Right		Right		4		4
	Down / PR/TRK-		Down		5		5
	Down / PR/TRK-		Ch -		6		6
	Setup		Menu		7		7
	Return		Back		8		8
	Pause / Step		Pause		9		9
	I<< Skip		I<<		0		0





 




 






 
 


 

 
 
 

 
 
 
 
 



 



 
 






 


 
 
 
 


 
 
 
 

 

 
 

 
 



Original	Sustituto
 Audio	 Dual
 Subtitle	 Subt
 Zoom	 Shift + Eject
 Angle	 Format
 Marker	 Pre Ch
 Search	 TV/R
 Title	 Vol +
 Repeat	 Text
 Random	 3D
 A-B	 Shift + Text

Original	Sustituto


 



 




Original	Sustituto	Original	Sustituto
 Power	 Power	 << Backward	 <<
 Eject	 Eject	 Play	 Play
 TV / VCR	 Menu	 >> Forward	 >>
 DVD	 Smart	 Clear	 Exit
 VCR	 Media	 1	 1
 AV	 AV	 2	 2
 CLK / CNT	 3D	 3	 3
 Up / PR/TRK+	 Up	 4	 4
 Up / PR/TRK+	 Ch +	 5	 5
 Down / PR/TRK-	 Down	 6	 6
 Down / PR/TRK-	 Ch -	 7	 7
 Right	 Right	 8	 8
 Left	 Left	 9	 9
 OK	 Ok	 0	 0
 i	 Info	 Audio	 Dual
 Pause / Step	 Pause	 Search	 TV/R
 Stop	 Stop	 CM Skip	 Yellow





Original	Sustituto	Original	Sustituto
 Rec / ITR	 Rec		
 LP	 Sleep		
 Show View	 Options		

