



| Original | Sustituto | Original | Sustituto |
|----------------|-----------------------------|---------------|--------------------|
| Power Receiver | Power | Surround | Eject / Surround |
| Power Audio | Red / Netflix / Search | 3 Stereo | Audio / Lang I/II |
| Power TV | Blue / Prime Video / Random | Help | Info / Angle |
| Power VCR | Shift + Red / Netflix / | Disc | Smart / List |
| Power VDP | Yellow / YouTube / Repeat | Disc Enter | Display / Media |
| Power CD | Green / APP / Repeat | TV / AV | AV / Input / RDS |
| Power TAPE | Shift + Green / APP / | TUNER 1 | 1 |
| TUNER | Shift + 6 | TUNER 2 | 2 |
| CD | Shift + 3 | TUNER 3 | 3 |
| TAPE MONITOR | Shift + 5 | Direct Tuning | Menu / Home |
| TV/VCR 2 | Shift + 1 | TV Vol+ | Shift + Vol+ |
| VDP | Shift + 2 | TUNER 4 | 4 |
| VCR1 | Shift + 4 | TUNER 5 | 5 |
| CH Level- | CH- / Page- | TUNER 6 | 6 |
| CH Level+ | CH+ / Page+ | TUNER >=10 | Guide / EPG / -/-- |
| Test | Text / Goto | TV Vol- | Shift + Vol- |
| CH Select | Setup / OPT / | TUNER 7 | 7 |



 



















































 













| Original | Sustituto | Original | Sustituto |
|----------------|-----------------------------|---------------|--------------------|
| Power Receiver | Power | Surround | Eject / Surround |
| Power Audio | Red / Netflix / Search | 3 Stereo | Audio / Lang I/II |
| Power TV | Blue / Prime Video / Random | Help | Info / Angle |
| Power VCR | Shift + Red / Netflix / | Disc | Smart / List |
| Power VDP | Yellow / YouTube / Repeat | Disc Enter | Display / Media |
| Power CD | Green / APP / Repeat | TV / AV | AV / Input / RDS |
| Power TAPE | Shift + Green / APP / | CD 1 | 1 |
| TUNER | Shift + 6 | CD 2 | 2 |
| CD | Shift + 3 | CD 3 | 3 |
| TAPE MONITOR | Shift + 5 | Direct Tuning | Menu / Home |
| TV/VCR 2 | Shift + 1 | TV Vol+ | Shift + Vol+ |
| VDP | Shift + 2 | CD 4 | 4 |
| VCR1 | Shift + 4 | CD 5 | 5 |
| CH Level- | CH- / Page- | CD 6 | 6 |
| CH Level+ | CH+ / Page+ | CD ≥=10 | Guide / EPG / -/-- |
| Test | Text / Goto | TV Vol- | Shift + Vol- |
| CH Select | Setup / OPT / | CD 7 | 7 |





| Original | Sustituto | Original | Sustituto |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  Power Receiver |  Power |  Surround |  Eject / Surround |
|  Power Audio |  Red / Netflix / Search |  3 Stereo |  Audio / Lang I/II |
|  Power TV |  Blue / Prime Video / Random |  Help |  Info / Angle |
|  Power VCR |  Shift + Red / Netflix / |  Disc |  Smart / List |
|  Power VDP |  Yellow / YouTube / Repeat |  Disc Enter |  Display / Media |
|  Power CD |  Green / APP / Repeat |  TV / AV |  AV / Input / RDS |
|  Power TAPE |  Shift + Green / APP / |  VDP 1 |  1 |
|  TUNER |  Shift + 6 |  VDP 2 |  2 |
|  CD |  Shift + 3 |  VDP 3 |  3 |
|  TAPE MONITOR |  Shift + 5 |  Direct Tuning |  Menu / Home |
|  TV/VCR 2 |  Shift + 1 |  TV Vol+ |  Shift + Vol+ |
|  VDP |  Shift + 2 |  VDP 4 |  4 |
|  VCR1 |  Shift + 4 |  VDP 5 |  5 |
|  CH Level- |  CH- / Page- |  VDP 6 |  6 |
|  CH Level+ |  CH+ / Page+ |  VDP ≥=10 |  Guide / EPG / -/-- |
|  Test |  Text / Goto |  TV Vol- |  Shift + Vol- |
|  CH Select |  Setup / OPT / |  VDP 7 |  7 |





| Original | Sustituto | Original | Sustituto |
|----------------|-----------------------------|---------------|-------------------|
| Power Receiver | Power | Surround | Eject / Surround |
| Power Audio | Red / Netflix / Search | 3 Stereo | Audio / Lang I/II |
| Power TV | Blue / Prime Video / Random | Help | Info / Angle |
| Power VCR | Shift + Red / Netflix / | Disc | Smart / List |
| Power VDP | Yellow / YouTube / Repeat | Disc Enter | Display / Media |
| Power CD | Green / APP / Repeat | TV / AV | AV / Input / RDS |
| Power TAPE | Shift + Green / APP / | VCR 1 1 | 1 |
| TUNER | Shift + 6 | VCR 1 2 | 2 |
| CD | Shift + 3 | VCR 1 3 | 3 |
| TAPE MONITOR | Shift + 5 | Direct Tuning | Menu / Home |
| TV/VCR 2 | Shift + 1 | TV Vol+ | Shift + Vol+ |
| VDP | Shift + 2 | VCR 1 4 | 4 |
| VCR1 | Shift + 4 | VCR 1 5 | 5 |
| CH Level- | CH- / Page- | VCR 1 6 | 6 |
| CH Level+ | CH+ / Page+ | VCR 1 ≥=10 | Guide / EPG / -/- |
| Test | Text / Goto | TV Vol- | Shift + Vol- |
| CH Select | Setup / OPT / | VCR 1 7 | 7 |



