













































 
 
 


























 









Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Update	 Play / Slow	Menu Left	 Left
Reveal	 Pause / Step / Freeze	OK Enter	 OK
Txt Stop	 Stop / Hold	Menu Right	 Right
Color- S.Std	 Sound / Title	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Audio+	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Disp	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media
Game Coo	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3














Original	Sustituto	Original	Sustituto
4			
5			
6			
7			
8			
9			
Guide -/-- 1.	 Guide / EPG / -/--		
0/10			
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
3.*	 +  Shift + Fav / Marker / PC		



Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Left	 Left
Mute	 Mute / Dimmer	OK Enter	 OK
Update	 Play / Slow	Menu Right	 Right
Reveal	 Pause / Step / Freeze	Menu Off	 Exit / Cancel / Clear
Txt Stop	 Stop / Hold	Menu Down	 Down
Audio+	 Sound / Title	Back	 Back / Return
Menu audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Disp	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4
Info	 Info / Angle	5	 5



Original	Sustituto	Original	Sustituto
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

