 



 

 

 













 



 

 

 

 






Original	Sustituto	Original	Sustituto
 Digital	 Audio / Lang I/II	 Menu	 Menu / Home
 Power	 Power	 Up	 Up
 Analog	 Sound / Title	 Left / Zoom -	 Left
 Presets	 Display / Media	 OK	 OK
 1	 1	 Right / Zoom +	 Right
 2	 2	 Down	 Down
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Return	 Back / Return
 5	 5	 Info	 Info / Angle
 6	 6	 Vol +	 Vol+
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 PR + / >>I	 CH+ / Page+
 9	 9	 >>I	 >>I / Preset+
 AV	 AV / Input / RDS	 Vol -	 Vol-
 0	 0	 Text	 Text / Goto
 List	 Smart / List	 PR - / I<<<	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 I<<<	 I<<< / Preset-





Original	Sustituto
 Digital	 Audio / Lang I/II
 Power	 Power
 Analog	 Sound / Title
 Presets	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 List	 Smart / List
 Exit	 Exit / Cancel / Clear

Original	Sustituto
 Menu	 Menu / Home
 Up	 Up
 Left / Zoom -	 Left
 OK	 OK
 Right / Zoom +	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 PR + / >>I	 >>I / Preset+
 PR + / >>I	 CH+ / Page+
 Vol -	 Vol-
 Text	 Text / Goto
 PR - / I<<<	 CH- / Page-
 PR - / I<<<	 I<<< / Preset-



