


 

 


 
 
 
 
 
 
 
| Original | Sustituto | | |
|----------|-----------|--|----------------------------|
| | Power | | Power |
| | Mute | | Mute / Dimmer |
| | P.Mode | | Picture / Format |
| | S.Mode | | Sound / Title |
| | Audio | | Audio / Lang I/II |
| | Sleep | | Sleep / Timer |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | -/-- | | Shift + Guide / EPG / -/-- |
| | 9 | | 9 |
| | 0 | | 0 |

| Original | Sustituto | | |
|----------|-----------|--|-----------------------------|
| | Recall | | Back / Return |
| | Play | | Play / Slow |
| | Pause | | Pause / Step / Freeze |
| | Stop | | Stop / Hold |
| | Tv/Radio | | TV/Radio / |
| | Guide | | Guide / EPG / -/-- |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | Source | | AV / Input / RDS |
| | Up | | Up |
| | Aspect | | Shift + Picture / Format |





| Original | Sustituto |
|---|-----------------------|
|  | Left |
|  | OK |
|  | Right |
|  | Display / Media |
|  | Down |
|  | Exit / Cancel / Clear |
|  | Text / Goto |
|  | Rec / Rec Mode |
|  | Info / Angle |
|  | Shift + Stop / |
|  | Eject / Surround |
|  | Subtitle / EQ |
|  | Setup / OPT / |
|  | CH+ / Page+ |
|  | Zoom / Size |
|  | Vol- |
|  | Menu / Home |

| Original | Sustituto |
|---|-------------------------------|
|  | Vol+ |
|  | Shift + Exit / Cancel / Clear |
|  | CH- / Page- |
|  | Smart / List |
|  | Fav / Marker / PC |
|  | D.Menu / Top |
|  | Shift + Display / Media |

