 


 

 











 











 

 

 





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Auto	 Eject / Surround

Original	Sustituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 FAV+	 Shift + Yellow / YouTube /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Repeat/FAV-	 Shift + Green / APP /
 CH-	 CH- / Page-
 Text	 Text / Goto





Original	Sustituto
TEXT	TUNE- << / Tune-
HOLD	TUNE+ >> / Tune+
INDEX	PRESET- l<</Index
SIZE	PRESET+ >>l / Preset+
TIMESHIFT	SLOW Play / Slow
TIMESHIFT	STEP-FREEZE Pause/Timeshift / Pause / Step / Freeze
SUBPAGE	HOLD Stop/Subpage / Stop / Hold
REVEAL	SIZE Zoom/Reveal / Zoom / Size
SLEEP	TIMER Sleep / Timer
TVRADIO	PROGRAM TV/Radio / TV/Radio /
TVRADIO	NETFLIX Red / Netflix / Search
	APP Green / APP / Repeat
	YouTube Yellow / YouTube / Repeat
	Prime Video Blue / Prime Video / Random
NICAM	LANG I/II Audio/Nicam / Audio / Lang I/II
GUIDE	GUIDE EPG Guide / EPG / -/--
REC	REC MODE Rec / Rec Mode

Original	Sustituto
SUBTITLE	EQ Subtitle / Subtitle / EQ

