 











 







 

 

 

 

 





 

 



 

















 

 

 


 






| Original | Sustituto |
|--|--|
|  Power |  Power |
|  Sleep |  Sleep / Timer |
|  Screen |  Picture / Format |
|  Presets |  Setup / OPT / |
|  ↔ |  TV/Radio / |
|  FAV |  Shift + Fav / Marker / PC |
|  Lang |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  TXT |  Text / Goto |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |

| Original | Sustituto |
|--|---|
|  9 |  9 |
|  EPG |  Guide / EPG / -/- |
|  0 |  0 |
|  Swap |  Fav / Marker / PC |
|  Photo/Music/Movi |  D.Menu / Top |
|  World |  Smart / List |
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  C |  Exit / Cancel / Clear |
|  Disp. |  Display / Media |
|  Search Mode |  Shift + Red / Netflix / |
|  Return |  Back / Return |



