
















 

 

 
















 



 

Original	Sustituto
 Open / Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Time Slip	 Shift + >> /
 Sat. Link	 Smart / List

Original	Sustituto
 0	 0
 Clear	 Exit / Cancel / Clear
 Info	 Info / Angle
 Text	 Text / Goto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Guide	 Guide / EPG / -/-
 Top Menu	 Menu / Home
 Disc Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return / Back	 Back / Return
 Red	 Red / Netflix / Search





Original	Sustituto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Search / Shift + Red / Netflix /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 Pause / Step / Freeze
	 Shift + 4
	 Shift + 2
	 Shift + >>I / Preset+
	 Sound / Title
	 Rec / Rec Mode
	 Shift + Rec / Rec Mode

Original	Sustituto
	 Setup / OPT /
	 Sleep / Timer
	 TV/Radio /
	 Shift + Play /

