





 



 

 



 

 



 

 

 






















 












 




 


 



 
 


 

 

 
 
 

 



Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DVD RTN	 Shift + 2
 Input	 AV / Input / RDS
 Audio A/D	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol +	 Vol+
 Vol -	 Vol-

Original	Sustituto
 P +	 CH+ / Page+
 P -	 CH- / Page-
 Menu / DVD	 Menu / Home
 Exit / Back	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Guide / Top Menu	 D.Menu / Top
 Guide / Top Menu	 Shift + D.Menu / Top Menu
 TV Fav/Radio / Setup	 TV/Radio /
 TV Fav/Radio / Setup	 Shift + TV/Radio / Program
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





 

 

 

 

 

 

 

 



 









 











 



 

 

 

 

 



 

 

 







Original	Sustituto	Original	Sustituto
 Video Format	 Shift + 4		
 Aspect	 Picture / Format		
 Index i+	 Info / Angle		
 Text / Mix	 Text / Goto		
 Open/Close / Subtitle	 Eject / Surround		
 Open/Close / Subtitle	 Shift + Eject / Surround		
 Stop / Dual I/II	 Stop / Hold		
 Stop / Dual I/II	 Shift + Stop /		
 Play	 Play / Slow		
 Pause / Step / [V]	 Pause / Step / Freeze		
 I<< / Reveal	 I<< / Preset-		
 << / Hold	 Shift + << /		
 << / Hold	 << / Tune-		
 >> / Size	 Shift + >> /		
 >> / Size	 >> / Tune+		
 >>I / Cancel	 Shift + >>I / Preset+		
 >>I / Cancel	 >>I / Preset+		





Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Set Up		Setup / OPT /
	[<>]		Picture / Format
	→ / ←		Display / Media
	[i+]/[≡i]		Info / Angle
	Text/Audio		Text / Goto
	Open/Close/Subtit		Eject / Surround
	Stop/O /I		Stop / Hold
	Play/[≡o]		Play / Slow
	Pause/Step/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-





Original	Sustituto	Original	Sustituto
>>/[♦]	>> / Tune+		
>> /[O]/[≡x]	>>  / Preset+		

