






 
 

 





 













 

 

 

 









 



 





 









Original	Sustituto
 Open / Close	 Eject / Surround
 FL Dimmer	 Mute / Dimmer
 On / Standby	 Power
 Setup	 Setup / OPT /
 Display	 Display / Media
 Zoom	 Zoom / Size
 3D	 Shift + 3
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Sustituto
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 T / Search	 Red / Netflix / Search
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 REV	 << / Tune-
 Play	 Play / Slow
 FWD	 >> / Tune+





Original	Sustituto	Original	Sustituto
Pause / Step	Pause / Step / Freeze		
I<< Skip	I<< / Preset-		
Stop	Stop / Hold		
Skip >>I	>>I / Preset+		
Slow	Shift + Play /		
Random	Blue / Prime Video / Random		
Memory	Smart / List		
Repeat	Green / APP / Repeat		
A-B RPT	Yellow / YouTube / Repeat		

