












 



 







 
 










Original	Sustituto
 VCR	 Green / APP / Repeat
 VCR	 Shift + 4
 DVD	 Red / Netflix / Search
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Open/Close	 Eject / Surround
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear / Count. Reset	 Exit / Cancel / Clear
 Angle	 Info / Angle

Original	Sustituto
 TV / VCR	 Smart / List
 0	 0
 Audio	 Audio / Lang I/II
 Subtitle/ATR	 Subtitle / EQ
 Memory	 TV/Radio /
 Zoom	 Zoom / Size
 E.A.M	 Text / Goto
 Play Mode	 Picture / Format
 Rec / OTR.	 Rec / Rec Mode
 Return	 Back / Return
 Display / CLK/CNT	 Display / Media
 Play	 Play / Slow
 << REW	 << / Tune-
 FWD >>	 >> / Tune+
 Slow	 Shift + Play /
 Stop	 Stop / Hold
 Pause Still	 Pause / Step / Freeze





Original	Sustituto
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
A-B RPT	Yellow / YouTube / Repeat
Set Up / VCR	Setup / OPT /
Up	Up
Up	CH+ / Page+
Menu	Menu / Home
Zero Return	Shift + 0
Left	Left
Enter	OK
Right	Right
Instant Skip	Blue / Prime Video / Random
Down	Down
Down	CH- / Page-

Original	Sustituto

