








 

 










 














 
 
 

 


 










 













	Original	Sustituto		Original	Sustituto
	DVD/USB	 +  Shift + Display / Media		8	 8
	Menu/PBC	 Menu / Home		9	 9
	Display	 Display / Media		0	 0
	Mute	 Mute / Dimmer		Setup	 Setup / OPT /
	P/N	 Guide / EPG / -/--		Up	 Up
	L/R	 +  Shift + Fav / Marker / PC		Down	 Down
	Angle	 Info / Angle		Left	 Left
	Language	 Audio / Lang I/II		Right	 Right
	Subtitle	 Subtitle / EQ		Enter	 OK
	Title	 Sound / Title		Play	 Play / Slow
	1	 1		Slow	 +  Shift + Play /
	2	 2		Vol-	 Vol-
	3	 3		Stop	 Stop / Hold
	4	 4		Vol+	 Vol+
	5	 5		<<	 << / Tune-
	6	 6		>>	 >> / Tune+
	7	 7		I<<	 I<< / Preset-





Original	Sustituto
 >>I	 >>I / Preset+
 Repeat	 Green / APP / Repeat
 Mark	 Fav / Marker / PC
 Goto	 Text / Goto
 Zoom	 Zoom / Size

Original	Sustituto

