











 










 









 

 

 
 










 



 
 


Original	Sustituto	Original	Sustituto
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK

Original	Sustituto	Original	Sustituto
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Original	Sustituto
 Timer	 Sleep / Timer
 Pause/Step	 Pause / Step / Freeze
 I>/Slow	 Eject / Surround
 I<<	 I<< / Preset-
 Rec List	 Smart / List
 ←/INS Replay	 CH- / Page-
 →/CM Skip	 CH+ / Page+
 >>I	 >>I / Preset+
 A-B	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 Repeat	 Green / APP / Repeat
 <<	 << / Tune-
 F1	 D.Menu / Top
 Source	 AV / Input / RDS
 Audio	 Audio / Lang I/II
 >>	 >> / Tune+

Original	Sustituto

