 
 
 
 
 
 
 

 
 


 




 





 





 





 




Original	Sustituto
	Mute / Dimmer 
	Shift + Pause / Step /  + 
	Audio / Lang I/II 
	Power 
	Smart / List 
	Sleep / Timer 
	Picture / Format 
	Display / Media 
	1 
	2 
	3 
	4 
	5 
	6 
	7 
	8 
	9 

Original	Sustituto
	AV / Input / RDS 
	0 
	Back / Return 
	Setup / OPT / 
	Sound / Title 
	Up 
	CH+ / Page+ 
	Vol- 
	Left 
	Menu / Home 
	OK 
	Right 
	Vol+ 
	CH- / Page- 
	Down 
	Text / Goto 
	Subtitle / EQ 