












 

 
 
 


 



 

 

 



 
 
 
 
 

 

 
 





 
 



 



 
 
 

 
 


 

 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Sustituto	Original	Sustituto
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down






 
 


 
 
 
 

 
 
 


 



 
 




 
 



 

Original	Sustituto	Original	Sustituto
PREV QV	SETTINGS OPT Options	SIZE	Size
NEXT FAV	FAV PRE-CH Pre Ch	ESCAPE PROG MIX	Prog / Mix
SOURCE	TIMER AV AV	ESCAPE PROG MIX	Prog / Mix
SLEEP	PROG SLEEP Sleep	RETURN SUBPG	Return / SUBPG
PICTURE	SHIFT + PICTURE FORMAT Shift + Format	REPEAT REVEAL	Repeat / Reveal
SOUND	SHIFT + SOUND DUAL Shift + Dual	SEARCH HOLD	Search / Hold
DISPLAY	DISPLAY INFO Info		
TOP I/II	SOUND DUAL Dual		
REV FAV-	<<		
FWD FAV+	>>		
TEXT USR/CR	APP MEDIA Media		
TEXT USR/CR	REPEAT TEXT Text		
INDEX	PLAY MODE Play		
INDEX	SHIFT + DISPLAY INFO Shift + Info		
INDEX	PAUSE Pause		
CANCEL	STOP Stop		
CANCEL	SHIFT + CLEAR EXIT Shift + Exit		

Original	Sustituto
PICTURE FORMAT	Format
HOME SMART	Smart
SHIFT + PROG SLEEP	Shift + Sleep
RETURN BACK	Back
SHIFT + RETURN BACK	Shift + Back
SEARCH TV/R	TV/R





Original	Sustituto	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Sustituto	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

