



Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

Original	Sustituto	Original	Sustituto
	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





Original	Sustituto	Original	Sustituto
[=+]/[X]	<< / Tune-		
[=x]/[··]	>> / Tune+		
[·]/[*]	l<< / Preset-		
[=◆]/[+]/Wide	Picture / Format		
[=?]	>>l / Preset+		
[=i]/Guide	Guide / EPG / -/-		
P<P/SWAP	Fav / Marker / PC		
PP	Back / Return		

