

 
 
 

 


 
 













Original	Sustituto
 Mute	 Mute / Dimmer
 Power	 Power
 Power Tv	 Shift + Power
 V-Format	 Picture / Format
 Zoom	 Zoom / Size
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Sustituto
 Text	 Text / Goto
 Red/Mosaic	 Red / Netflix / Search
 Green/Sleep	 Green / APP / Repeat
 Green/Sleep	 Shift + Sleep / Timer
 Yellow/Audio	 Yellow / YouTube / Repeat
 Yellow/Audio	 Audio / Lang I/II
 Blue/List	 Blue / Prime Video / Random
 Blue/List	 Smart / List
 Page Up	 Shift + CH+ /
 Page Down	 Shift + CH- /
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down





Original	Sustituto
 Vol+	 Vol+
 i/Info	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 PR-	 CH- / Page-
 Last	 I<< / Preset-
 <<	 << / Tune-
 Play/Pause	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Time Shift	 AV / Input / RDS
 Option	 Setup / OPT /
 Media	 Display / Media
 Pause	 Pause / Step / Freeze
 PIP	 D.Menu / Top

Original	Sustituto
 Swap	 Exit / Cancel / Clear
 Timer	 Sleep / Timer

