



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	V+
	Mute
	P+

Original	Sustituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	* / O
	* / Q





Original	Sustituto	Original	Sustituto
[≡]/Text	Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[≡]..	Sound / Title		
[-O-]	Setup / OPT /		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

