



Original	Sustituto	Original	Sustituto
 Standby/On	 Power	 P+	 CH+ / Page+
 1	 1	 Up	 Up
 2	 2	 CL/Clear	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 4	 4	 Vol-	 Vol-
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 >I/Index	 >>I / Preset+
 9	 9	 P-	 CH- / Page-
 0	 0	 Down	 Down
 Child Lock	 Setup / OPT /	 >I</Still	 Pause / Step / Freeze
 Monitor	 Display / Media	 <<	 << / Tune-
 Select	 Smart / List	 Stop	 Stop / Hold
 Timer	 Sleep / Timer	 Play	 Play / Slow
 Record	 Rec / Rec Mode	 >>	 >> / Tune+
 Menu	 Menu / Home		

