
 
 





 


 

 



 




 





 

 







Original		Sustituto		Original		Sustituto	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[*]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





	Original	Sustituto	Original	Sustituto
	Record	Rec		
	<</Index	<<		
	>>/Hold	>>		
	<</Reveal	<<		
	>> /Subpage	>>		
	Mix/Fav List	Pre Ch		
	Size/Subtitle	Subt		
	Cancel/Audio	3D		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

