



































Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Auto/Track	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Play/Back	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
C/CH	 Eject / Surround	Return	 Back / Return
Remain	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	DVD/TV	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+



