








 






 



 



 
 





 
 

 



 
 




 


 
 
 




 


 


 



 



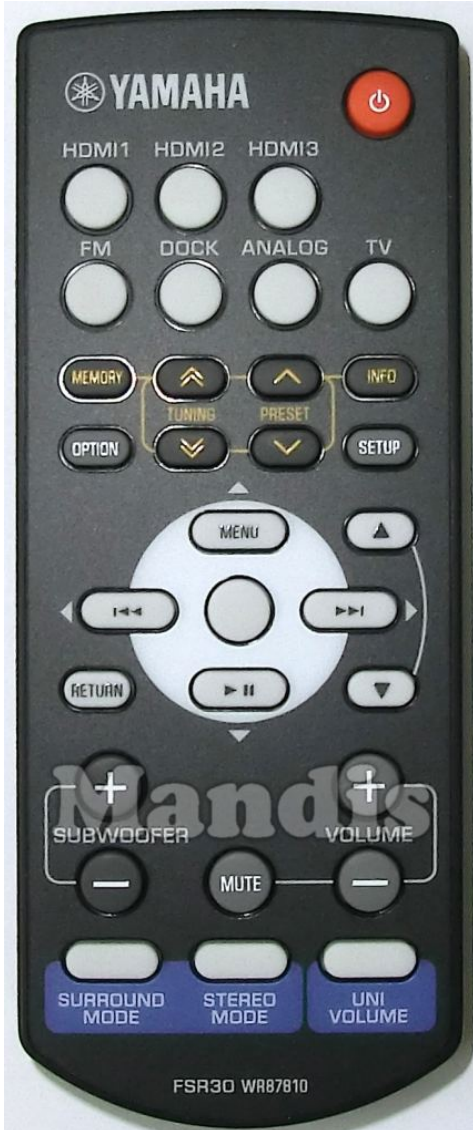 



 

 




Original	Sustituto	Original	Sustituto
	Power		Power
	HDMI1		1
	HDMI2		2
	HDMI3		3
	FM		4
	Dock		5
	Analog		6
	TV		TV/R
	Memory		Smart
	Info		Info
	Tuning ▲		>>
	Tuning ▼		<<
	Preset ▲		9
	Preset ▼		Pre Ch
	Option		Options
	Setup		D. Menu
	▲		Ch +
	▼		Ch -
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	>>I		>>I
	I<<		I<<
	Return		Back
	Subwoofer+		7
	Subwoofer-		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





Original	Sustituto	Original	Sustituto
 Surround Mode	 AV		
 Stereo Mode	 Subt		
 Uni Volume	 Dual		



Original	Sustituto	Original	Sustituto