

 



 









 





















Original	Sustituto
 Power	 Power
 Standby	 Shift + Power
 Sleep	 Sleep / Timer
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 DVD	 Shift + 2
 D-TV/CBL	 Shift + 1
 TUNER	 Shift + 6
 Multi CH In	 Shift + 0
 V-AUX / Dock	 Shift + 7
 DVR	 Shift + 4
 NET	 Shift + 9
 USB	 Shift + 8
 Volume +	 Vol+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 Stereo	 1

Original	Sustituto
 Music	 2
 Entertain	 3
 Movie	 4
 Standard	 5
 Select	 6
 Extd Sur.	 7
 Direct ST	 8
 Speakers	 9
 Enhancer	 Guide / EPG / -/-
 Night	 0
 Straight	 Fav / Marker / PC
 Level	 Sound / Title
 Up / Preset/CH +	 Up
 Set Menu	 Menu / Home
 Left/-	 Left
 Enter	 OK
 Right/+	 Right





Original	Sustituto
	Power
	+ Shift + Power
	Sleep / Timer
	+ Shift + 3
	+ Shift + 5
	+ Shift + 2
	+ Shift + 1
	+ Shift + 6
	+ Shift + 0
	+ Shift + 7
	+ Shift + 4
	+ Shift + 8
	+ Shift + 9
	Vol+
	Vol-
	Mute / Dimmer
	1

Original	Sustituto
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Fav / Marker / PC
	Sound / Title
	Up
	>> / Preset+
	Menu / Home
	Left
	OK
	Right



A/B/C/D/E+

