


 

 

 

 
 

 



 



 




Original		Recharge		Original		Recharge	
	POWER		Power		MENU		Menu / Home
	INFO		Info / Angle		EXIT		Exit / Cancel / Clear
	MUTE		Mute / Dimmer		UP		Up
	1		1		LEFT		Left
	2		2		ENTER		OK
	3		3		RIGHT		Right
	4		4		VOL+		Vol+
	5		5		DOWN		Down
	6		6		CH+		CH+ / Page+
	7		7		VOL-		Vol-
	8		8		CH-		CH- / Page-
	9		9		LIST		Smart / List
	SOURCE		AV / Input / RDS		SLEEP		Sleep / Timer
	0		0		EPG		Guide / EPG / -/-
	AUDIO		Audio / Lang / III		FAV		Fav / Marker / PC
	FORMAT		Picture / Format		<<		<< / Tune-
	BACK		Back / Return		RED		Red / Netflix / Search





Original	Recharge	Original	Recharge
	>> / Tune+		
	Green / APP / Repeat		
	I<< / Preset-		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	>>I / Preset+		
	Play / Slow		
	Pause / Step / Freeze		
	Text / Goto		
	Stop / Hold		
	Subtitle / EQ		
	TV/Radio /		
	Setup / OPT /		
	Display / Media		
	D.Menu / Top		
	Rec / Rec Mode		

