


 

 

 

 
 

 



 



 




Original		Recharge		Original		Recharge	
	POWER		Power		MENU		Menu / Home
	INFO		Info / Angle		EXIT		Exit / Cancel / Clear
	MUTE		Mute / Dimmer		UP		Up
	1		1		LEFT		Left
	2		2		ENTER		OK
	3		3		RIGHT		Right
	4		4		VOL+		Vol+
	5		5		DOWN		Down
	6		6		CH+		CH+ / Page+
	7		7		VOL-		Vol-
	8		8		CH-		CH- / Page-
	9		9		LIST		Smart / List
	SOURCE		AV / Input / RDS		SLEEP		Sleep / Timer
	0		0		EPG		Guide / EPG / -/-
	AUDIO		Audio / Lang / III		FAV		Fav / Marker / PC
	FORMAT		Picture / Format		<<		<< / Tune-
	BACK		Back / Return		RED		Red / Netflix / Search





	Original	Recharge	Original	Recharge
		>>		>> / Tune+
		GREEN		Green / APP / Repeat
		I<<		I<< / Preset-
		YELLOW		Yellow / YouTube / Repeat
		BLUE		Blue / Prime Video / Random
		>>I		>>I / Preset+
		PLAY		Play / Slow
		PAUSE		Pause / Step / Freeze
		TEXT		Text / Goto
		STOP		Stop / Hold
		SUBTITLE		Subtitle / EQ
		RADIO		TV/Radio /
		OPT		Setup / OPT /
		DMP		Display / Media
		INDEX		D.Menu / Top
		REC		Rec / Rec Mode

