



Original	Recharge	Original	Recharge
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [ I ]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 I<< / [≡+]	 I<< / Preset-	 EPG	 Guide / EPG / -/-
 >>I / [≡..]	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REC	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1







Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1























Original	Recharge	Original	Recharge
Power	 Power	Power	 Power
Mute	 Mute / Dimmer	Mute / Dimmer	 Mute / Dimmer
Play	 Play / Slow	Play / Slow	 Play / Slow
Pause	 Pause / Step / Freeze	Pause / Step / Freeze	 Pause / Step / Freeze
Stop	 Stop / Hold	Stop / Hold	 Stop / Hold
Rec	 Rec / Rec Mode	Rec / Rec Mode	 Rec / Rec Mode
<</[Timer]	 << / Tune-	<< / Tune-	 << / Tune-
>>/[≡?]	 >> / Tune+	>> / Tune+	 >> / Tune+
I<</[≡⇅]	 I<< / Preset-	I<< / Preset-	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+	>>I / Preset+	 >>I / Preset+
Audio	 Audio / Lang I/II	Audio / Lang I/II	 Audio / Lang I/II
Subtitle	 Subtitle / EQ	Subtitle / EQ	 Subtitle / EQ
I<</[≡⇅]	 Zoom / Size	Zoom / Size	 Zoom / Size
<</[Timer]	 Sleep / Timer	Sleep / Timer	 Sleep / Timer
Text	 Text / Goto	Text / Goto	 Text / Goto
Source/Av	 AV / Input / RDS	AV / Input / RDS	 AV / Input / RDS
[II]	 Menu / Home	Menu / Home	 Menu / Home

Original	Recharge	Original	Recharge
Up	 Up	Up	 Up
Info	 Info / Angle	Info / Angle	 Info / Angle
Left	 Left	Left	 Left
Ok	 OK	OK	 OK
Right	 Right	Right	 Right
Exit	 Exit / Cancel / Clear	Exit / Cancel / Clear	 Exit / Cancel / Clear
Down	 Down	Down	 Down
Recall	 Back / Return	Back / Return	 Back / Return
Vol+	 Vol+	Vol+	 Vol+
[≡i]	 Smart / List	Smart / List	 Smart / List
Ch+	 CH+ / Page+	CH+ / Page+	 CH+ / Page+
Vol-	 Vol-	Vol-	 Vol-
Ch-	 CH- / Page-	CH- / Page-	 CH- / Page-
1	 1	1	 1
2	 2	2	 2
3	 3	3	 3
4	 4	4	 4





Original	Recharge	Original	Recharge
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 +  Shift + Pause / Step /		

