

 

 


 










 








| Original | | Recharge | | Original | | Recharge | |
|---|----------------|---|------------------------|---|----------------|---|-----------------------------|
|  | POWER |  | Power |  | REPEAT/GREEN/▼ |  | Green / APP / Repeat |
|  | INFO |  | Info / Angle |  | 7 |  | 7 |
|  | HDMI CONTROL |  | Smart / List |  | 8 |  | 8 |
|  | SLEEP |  | Sleep / Timer |  | 9 |  | 9 |
|  | SCREEN |  | Picture / Format |  | ROOT/YELLOW |  | Yellow / YouTube / Repeat |
|  | SOURCE |  | AV / Input / RDS |  | RETURN |  | Back / Return |
|  | PRESETS |  | Setup / OPT / |  | 0 |  | 0 |
|  | 1 |  | 1 |  | MENU |  | Menu / Home |
|  | 2 |  | 2 |  | TITLE/BUE |  | Sound / Title |
|  | 3 |  | 3 |  | TITLE/BUE |  | Blue / Prime Video / Random |
|  | ZOOM/RED/▲ |  | Zoom / Size |  | UP |  | Up |
|  | ZOOM/RED/▲ |  | Shift + CH+ / |  | LEFT |  | Left |
|  | ZOOM/RED/▲ |  | Red / Netflix / Search |  | OK/SELECT |  | OK |
|  | 4 |  | 4 |  | RIGHT |  | Right |
|  | 5 |  | 5 |  | DOWN |  | Down |
|  | 6 |  | 6 |  | P+ |  | CH+ / Page+ |
|  | REPEAT/GREEN/▼ |  | Shift + CH- / |  | P- |  | CH- / Page- |

Page-





| Original | Recharge |
|-------------|-------------------------|
| V- | Vol- |
| V+ | Vol+ |
| FAV | Fav / Marker / PC |
| LANG | Audio / Lang I/II |
| SUBTITLE | Subtitle / EQ |
| MUTE | Mute / Dimmer |
| SWAP/↔ | Shift + Back / Return |
| EPG | Guide / EPG / -/-- |
| [*] / [..] | D.Menu / Top |
| TEXT | Text / Goto |
| C | Exit / Cancel / Clear |
| DISPLAY | Display / Media |
| ANGLE | Shift + Info / Angle |
| SEARCH MODE | Shift + Red / Netflix / |
| REC | Rec / Rec Mode |
| STOP | Stop / Hold |
| PLAY | Play / Slow |

| Original | Recharge |
|----------|-----------------------|
| PAUSE | Pause / Step / Freeze |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

