



Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Sleep		Sleep / Timer		Back		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Source		AV / Input / RDS		CH-		CH- / Page-
	1		1		Up		Up
	2		2		CH+		CH+ / Page+
	3		3		Left		Left
	Audio/Lang		Audio / Lang I/II		Enter		OK
	4		4		Right		Right
	5		5		Vol-		Vol-
	6		6		Down		Down
	Tv/Radio		TV/Radio /		Vol+		Vol+
	7		7		Setup		Setup / OPT /
	8		8		Play/Timeshift		Play / Slow
	9		9		Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear		Stop		Stop / Hold
	CH.List		Smart / List		Eject		Eject / Surround



