



Original	Rechange
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
16:9	Picture / Format
0/FAV	Fav / Marker / PC
0/FAV	0
[O]/Repeat	Shift + Green / APP /
Vol+	Vol+
Input	AV / Input / RDS

Original	Rechange
P+	CH+ / Page+
Vol-	Vol-
EPG/?/A-B	Shift + Yellow / YouTube /
EPG/?/A-B	Guide / EPG / -/--
P-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Q/Double	Shift + Red / Netflix /
M	Menu / Home
←	Back / Return
i	Info / Angle
Red	Red / Netflix / Search
Play/Pause	Play / Slow
Green	Green / APP / Repeat





	Original	Rechange	Original	Rechange
	<<	<< / Tune-		
	Yellow	Yellow / YouTube / Repeat		
	Stop	Stop / Hold		
	Blue	Blue / Prime Video / Random		
	>>	>> / Tune+		
	I<<	I<< / Preset-		
	TXT	Text / Goto		
	>>I	>>I / Preset+		
	[...]	Subtitle / EQ		
	Audio	Audio / Lang I/II		

