



Original	Rechange
Power	Power
Tv	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
FAV CH	Fav / Marker / PC
0	0
PRE CH	Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Rechange
Vol-	Vol-
Source	AV / Input / RDS
PR-	CH- / Page-
Info	Info / Angle
Menu	Menu / Home
Guide	Guide / EPG / -/-
Tools	Setup / OPT /
Up	Up
Return	Shift + Back / Return
Left	Left
Enter	OK
Right	Right
CH LIST	Smart / List
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat



