



 









 

 

 





 

 

 
 


Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge
 CEC	 Smart / List
 ?	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





	Original	Recharge	Original	Recharge
	PR-			CH- / Page-
	I<			I<< / Preset-
	>I			>>I / Preset+
	<<			<< / Tune-
	>>			>> / Tune+
	Rec			Rec / Rec Mode
	Play			Play / Slow
	Pause			Pause / Step / Freeze
	Stop			Stop / Hold
	[<>]			Picture / Format
	Dialog			Audio / Lang I/II
	[...]			Subtitle / EQ
	Tv/Radio			TV/Radio /
	My Media			Display / Media

