



 









 

 

 





 

 

 
 


Original	Recharge
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
FAV	Fav / Marker / PC
0	0
TXT	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge
CEC	Smart / List
?	D.Menu / Top
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Back	Back / Return
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / -/-
Tools	Setup / OPT /
Vol+	Vol+
Source	AV / Input / RDS
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer





	Original	Recharge	Original	Recharge
	PR-	 CH- / Page-		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	[<>]	 Picture / Format		
	Dialog	 Audio / Lang I/II		
	[...]	 Subtitle / EQ		
	Tv/Radio	 TV/Radio /		
	My Media	 Display / Media		

