




























 





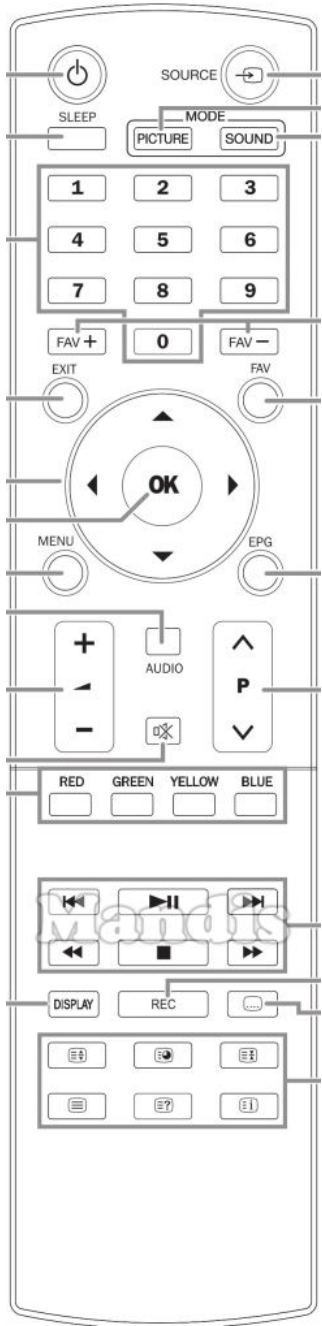 


Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Picture Mode	 Picture / Format
 Sound Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV+	 Shift + Up
 0	 0
 FAV-	 Shift + Down

Original	Rechange
 Exit	 Exit / Cancel / Clear
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Audio	 Audio / Lang I/II
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





	Original	Recharge
	Yellow	Yellow / YouTube / Repeat
	Blue	Blue / Prime Video / Random
	I<<	I<< / Preset-
	Pause	Pause / Step / Freeze
	Play	Play / Slow
	>>I	>>I / Preset+
	<<	<< / Tune-
	Stop	Stop / Hold
	>>	>> / Tune+
	Display	Display / Media
	Rec	Rec / Rec Mode
	[...]	Subtitle / EQ
	[≡◆]	Zoom / Size
	[≡○]	Eject / Surround
	[≡+]	+ Shift + Stop /
	[≡]	Text / Goto
	[≡?]	Info / Angle

	Original	Recharge
	[≡i]	Smart / List

