







| Original | Rechange |
|---|-----------------------|
|  | Power |
|  | Mute / Dimmer |
|  | Play / Slow |
|  | Pause / Step / Freeze |
|  | Stop / Hold |
|  | << / Tune- |
|  | >> / Tune+ |
|  | I<< / Preset- |
|  | >>I / Preset+ |
|  | Subtitle / EQ |
|  | Zoom / Size |
|  | D.Menu / Top |
|  | Setup / OPT / |
|  | Text / Goto |
|  | AV / Input / RDS |
|  | Menu / Home |
|  | Up |

| Original | Rechange |
|---|-----------------------|
|  | Info / Angle |
|  | Left |
|  | OK |
|  | Right |
|  | Exit / Cancel / Clear |
|  | Down |
|  | Back / Return |
|  | Vol+ |
|  | Smart / List |
|  | CH+ / Page+ |
|  | Vol- |
|  | Display / Media |
|  | CH- / Page- |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |



