



Original	Rechange	Original	Rechange
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow

Original	Rechange	Original	Rechange
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow





Original	Rechange	Original	Rechange
 Blue/Pause	 Blue / Prime Video / Random		
 Blue/Pause	 Pause / Step / Freeze		
 Text/[≡]	 Text / Goto		
 T.OPT/<<<	 I<< / Preset-		
 T.OPT/<<<	 Setup / OPT /		
 T.OPT/<<<	 <<< / Tune-		
 Subtitle/>>>	 >>>I / Preset+		
 Subtitle/>>>	 Subtitle / EQ		
 Subtitle/>>>	 >>> / Tune+		
 Simplink	 Sleep / Timer		
 Q.Menu	 D.Menu / Top		
 Info	 Info / Angle		
 Guide	 Guide / EPG / -/--		
 FAV/Mark	 Fav / Marker / PC		

Original	Rechange	Original	Rechange

