



Original	Rechange	Original	Rechange
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow

Original	Rechange	Original	Rechange
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow



