









 


 

 

 






 












 
 

 
 
 

 
 
 
 
 
 
 


 
 


 
 
 

 
 









Original		Rechange		Original		Rechange	
	Power		Power		OK		Ok
	Source		AV		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		PR+		Ch +
	5		5		PR-		Ch -
	6		6		Vol+		Vol +
	7		7		Vol-		Vol -
	8		8		Exit		Exit
	9		9		Back		Back
	0		0		Mute		Mute
	Recall		Pre Ch		i		Info
	TV		TV/R		Guide		Guide
	Menu		Menu		[≡]/Text		Text
	Q.Menu		D. Menu		Folder		Format
	World		Shift + Guide		[-O-]		Subt





Original		Recharge		Original	Recharge
	*/O		Sleep		
	*/Q		Eject		
	Netflix		Media		
	Camera-Music-Ph		Options		
	YouTube		3D		
	[≡]..		List		
	Lang		Dual		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Play		Play		
	Rec		Rec		
	Pause		Pause		
	>>		>>		
	<<		<<		
	Stop		Stop		

