










	Original	Rechange	Original	Rechange
	 Power	 Power	 Vol-	 Vol-
	 Source	 AV / Input / RDS	 CH LIST	 Smart / List
	 1	 1	 P-	 CH- / Page-
	 2	 2	 Content	 D.Menu / Top
	 3	 3	 Menu	 Menu / Home
	 4	 4	 Guide	 Guide / EPG / -/-
	 5	 5	 Tools	 Setup / OPT /
	 6	 6	 Info	 Info / Angle
	 7	 7	 Up	 Up
	 8	 8	 Left	 Left
	 9	 9	 OK	 OK
	 TTX/MIX	 Text / Goto	 Right	 Right
	 0	 0	 Return	 Shift + Back / Return
	 PRE-CH	 Back / Return	 Down	 Down
	 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
	 Mute	 Mute / Dimmer	 Red/A	 Red / Netflix / Search
	 P+	 CH+ / Page+	 Green/B	 Green / APP / Repeat



