







 
 







 


 




 







 
 
 
 
 
 



 
 

 


 
 

 

 
 



 




 


 





Original		Rechange		Original		Rechange	
	Power		Power		CH+		Ch +
	Source		AV		CH-		Ch -
	Sleep		Sleep		Down		Down
	Mute		Mute		Right		Right
	1		1		Left		Left
	2		2		Vol-		Vol -
	3		3		Vol+		Vol +
	4		4		Enter		Ok
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		Info		Info
	0		0		EPG		Guide
	-/--		Shift + Guide		Menu		Menu
	Recall		Pre Ch		Nicam		Media
	Up		Up		FAV+		>>





Original		Recharge		Original		Recharge	
	FAV-		<<				
	TXT		Text				
	Edit/Group		Options				
	Index		Back				
	Lang/Audio		Dual				
	TV/Radio		TV/R				
	Subtitle		Subt				
	Subpage		Shift + Subt				
	Size		Format				
	Hold		3D				
	Still		Exit				
	P.Mode		Shift + Format				
	S.Mode		Shift + Dual				

