



Original	Recharge
Standby	Power
PAL/HDMI	TV/Radio /
Backlight On/Off	Shift + Power
Mute	Mute / Dimmer
Setup	Setup / OPT /
Target	Red / Netflix / Search
Edit	Shift + Setup / OPT / Tools
Repeat	Green / APP / Repeat
Subtitle	Subtitle / EQ
Video Out	Shift + 4
i/Display	Display / Media
Zoom	Zoom / Size
Audio	Audio / Lang I/II
Photo Digest	D.Menu / Top
Photo Mode	Shift + Zoom /
Home	Menu / Home
Slide Time	Shift + Sleep / Timer

Original	Recharge
Up	Up
Rotate	Shift + Text /
Left	Left
Enter	OK
Right	Right
CH Sub Audio	Shift + Audio / Lang I/II
Down	Down
Info	Info / Angle
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Source	AV / Input / RDS
4:3/16:9	Picture / Format
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold



