





 
































Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Eject/Tv Audio	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Vol-	 Vol-
 Pic	 Picture / Format
 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 DVD Setup	 Setup / OPT /
 Back/Tv/Radio	 Shift + Back / Return
 Text	 Text / Goto





Original	Rechange
 EPG	 Guide / EPG / -/--
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Red/DVD/USB	 Red / Netflix / Search
 Green/Title	 Green / APP / Repeat
 Yellow/PBC	 Yellow / YouTube / Repeat
 Blue/Angle	 Blue / Prime Video / Random
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Return	 Back / Return
 Display	 Display / Media
 DVD Audio	 Audio / Lang I/II

Original	Rechange
 Subtitle	 Subtitle / EQ
 Reveal	 Shift + Exit / Cancel / Clear
 Hold	 Shift + Stop /
 List	 Smart / List
 Index	 TV/Radio /
 Subpage	 Shift + Smart / List
 Size	 Zoom / Size
 Mix	 Shift + Display / Media
 Freeze	 Shift + Pause / Step /

