


 



 


















 



 









































Original	Rechange	Original	Rechange
 Power	 Power	 Down	 Down
 Mute	 Mute / Dimmer	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Prog+	 CH+ / Page+
 3	 3	 Prog-	 CH- / Page-
 4	 4	 Vol+	 Vol+
 5	 5	 Info	 Info / Angle
 6	 6	 EPG	 Guide / EPG / -/-
 7	 7	 Menu	 Menu / Home
 8	 8	 Red/A	 Red / Netflix / Search
 9	 9	 Green/B	 Green / APP / Repeat
 0	 0	 Yellow/C	 Yellow / YouTube / Repeat
 -/-	 Shift + Guide / EPG / -/-	 Blue/D	 Blue / Prime Video / Random
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS	 Cancel	 Exit / Cancel / Clear
 OK	 OK	 TXT	 Text / Goto
 Up	 Up	 Size	 Zoom / Size





Original	Rechange	Original	Rechange
HOLD	Hold	HOLD	Stop / Hold
MIX	Mix	SHIFT + GOTO TEXT	Shift + Text /
REVEAL	Reveal	PROGRAM TV/RADIO	TV/Radio /
INDEX	Index	TOP MENU D.MENU	D.Menu / Top
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
SUBPAGE	Subpage	SURROUND	Eject / Surround
FORMAT	Format	SHIFT + FORMAT PICTURE	Shift + Picture / Format
VOL-	Vol-	VOL-	Vol-
P.MODE	P Mode	FORMAT PICTURE	Picture / Format
TEXT	Text	OPT-TOOLS SETUP	Setup / OPT /
S.MODE	S Mode	TITLE SOUND	Sound / Title
3DNR	3DNR	LIST SMART	Smart / List
MTS	MTS	MEDIA DISPLAY	Display / Media

