

 



 



 



 

 

 

 

 

























 





 



 













Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Lang		Sound / Title		OK		OK
	Lang		Shift + Audio / Lang I/II		Right		Right
	Search		Red / Netflix / Search		Vol+		Vol+
	Memory		D.Menu / Top		Down		Down
	Favorite PR		Fav / Marker / PC		CH-		CH- / Page-
	Game		Picture / Format		Mute		Mute / Dimmer
	Teletext		Text / Goto		Audio		Audio / Lang I/II
	Guide		Shift + Guide / EPG / -/-		1		1
	PR List		Smart / List		2		2
	EPG		Guide / EPG / -/-		3		3
	Info		Info / Angle		Pause		Pause / Step / Freeze
	Menu		Menu / Home		4		4
	Exit		Exit / Cancel / Clear		5		5
	Up		Up		6		6
	CH+		CH+ / Page+		Tv/Radio		TV/Radio /
	Left		Left		7		7





Original	Recharge	Original	Recharge
8	8	8	8
9	9	9	9
0	0	0	0
P/N	P/N	OPT-TOOLS	Setup / OPT /
Recall	Recall	RETURN	Back / Return
TV/AV	TV/AV	RDS	AV / Input / RDS
-	-	PRESET-	!<< / Preset-
+	+	PRESET+	>>! / Preset+
+	-/--	SHIFT + 0	Shift + 0
MODE	MODE	MEDIA	Display / Media

Original	Recharge

