 










 
 
 
 
 
 
 
 
 

 

 
 

 








Original	Recharge
 Power	 Power
 Mute	 Mute
 Tv/Radio	 TV/R
 FAV	 Pre Ch
 World/Internet	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 LIB	 List
 P:P	 AV

Original	Recharge
 Music/Photo/Cam	 3D
 EPG	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Exit	 Exit
 Info	 Info
 Back	 Back
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Stop	 Stop
 Play	 Play





Original		Recharge		Original		Recharge	
	Rec		Rec				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Text		Text				
	Subt.		Subt				
	Audio		Dual				
	OPT		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

