



Original		Recharge		Original		Recharge	
	Power		Power		3		3
	[i+]		Info / Angle		4		4
	P.Info		Display / Media		5		5
	ATV		Shift + Smart / List		6		6
	DTV		Smart / List		7		7
	SAT		Shift + 0		8		8
	Radio		TV/Radio /		9		9
	Power Source		Shift + Power		Return		Shift + Back / Return
	<< Source		<< / Tune-		0		0
	Play Source		Play / Slow		Source		AV / Input / RDS
	>> Source		>> / Tune+		I/II/I-II		Audio / Lang I/II
	Option Source		Setup / OPT /		[<I>]		Picture / Format
	Rec Source		Rec / Rec Mode		AV Mode		Shift + AV / Input / RDS
	Rec Stop		Pause / Step / Freeze		Eco		Sound / Title
	Stop Source		Stop / Hold		Mute		Mute / Dimmer
	1		1		Vol+		Vol+
	2		2		PR+		CH+ / Page+





Original	Recharge
Text	Text / Goto
Vol-	Vol-
PR-	CH- / Page-
Control	D.Menu / Top
Menu	Menu / Home
EPG	Guide / EPG / -/--
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down
Back	Back / Return
[...]	Subtitle / EQ
[= ?]	Eject / Surround
[= o]	Sleep / Timer
[= +]	Shift + Stop / Hold

Hold

Original	Recharge
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

