


 
 

 




 





 



 

 
 
 






Original	Rechange
	Power
	Tv Sys
	Mute
	Setup
	Device
	Option
	Slow
	DVD
	Slide
	Zoom
	Subtitle
	Audio
	Repeat
	<<
	>>
	Play
	Pause

Original	Rechange
	Power
	TV/Radio /
	Mute / Dimmer
	Setup / OPT /
	AV / Input / RDS
	Shift + Setup / OPT / Tools
	Shift + Play /
	Shift + 2
	Picture / Format
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	Shift + Green / APP /
	<< / Tune-
	>> / Tune+
	Play / Slow
	Pause / Step / Freeze

Original	Rechange
	Stop
	Home
	Up
	Back
	Left
	OK
	Right
	Vol+
	Down
	>>I / Preset+
	Vol-
	I<< / Preset-
	1
	2
	3
	Rec
	4

Original	Rechange
	Stop / Hold
	Menu / Home
	Up
	Back / Return
	Left
	OK
	Right
	Vol+
	Down
	>>I / Preset+
	Vol-
	I<< / Preset-
	1
	2
	3
	Rec / Rec Mode
	4





	Original	Recharge		Original	Recharge
	5	5			
	6	6			
	Time Shift	Sleep / Timer			
	7	7			
	8	8			
	9	9			
	0	0			
	Red	Red / Netflix / Search			
	Green/EPG	Green / APP / Repeat			
	Yellow/TTX	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			

	Original	Recharge

