

 
 


 



 

 

 



 



 
 
 





 
 


 
 


 
 
 

 
 
 

 
 


 

 

 
 
 

 
 
 

 
 
 
 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		6		6
	Tv/TXT		Text		7		7
	Input		AV		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down		Back		Back
	Right		Right		FAV		Shift + Pre Ch
	Left		Left		Menu		Menu
	Vol+		Vol +		Exit		Exit
	Vol-		Vol -		Nicam/A2		Shift + Guide
	CH+		Ch +		Display		Shift + Info
	CH-		Ch -		Mute		Mute
	1		1		Picture		Format
	2		2		Sound		Dual
	3		3		Sleep		Sleep
	4		4		Subtitle		Subt
	5		5		EPG		Guide





	Original	Recharge	Original	Recharge
	 CH/List	 Pre Ch		
	 Red	 Red		
	 Green	 Green		
	 Yellow	 Yellow		
	 Blue/Screen	 Blue		
	 Play	 Play		
	 Pause	 Pause		
	 Stop	 Stop		
	 Record	 Rec		
	 >>/Size	 >>		
	 <</Hold	 <<		
	 Cancel	 Shift + Back		
	 Reveal/Rep	 Eject		
	 I<</Subpage	 D. Menu		
	 >>I/Index	 Info		
	 List	 List		

