















 



 

 



 









 

 



 

 







 



 

 





 







Original	Rechange
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Setup / OPT /
	 0
	 AV / Input / RDS
	 Shift + 1
	 Sound / Title
	 Picture / Format

Original	Rechange
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Down
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Text / Goto
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Back / Return
	 TV/Radio /





	Original	Recharge	
	CH-	CH- / Page-	
	FAV	Fav / Marker / PC	
	Subtitle	Subtitle / EQ	
	Audio	Audio / Lang I/II	
	Guide	Guide / EPG / -/--	
	[?]	Shift + Info / Angle	
	[≡x]	Shift + 5	
	[:≡]	Shift + 4	
	[⤴]	Shift + 3	
	[⤵]	Shift + 2	
	PIP Pos	D.Menu / Top	
	PIP Size	Zoom / Size	
	PIP	Eject / Surround	

	Original	Recharge

